



Models - 91420 91520

Operating Instructions



1. **Set Key**

Short press to enable the music volume navigation
Long press to enable the clock navigation Hour and minute settings



2. **Music / Bluetooth Key**

Short press to enter or exit the Bluetooth mode
Long Press – to refuse a phone call



3. **Demister Key + Key**

Short press to open or close the demister pad
When is volume smode increase the volume
When in clock mode add an hour or add a minute



4. **LED Key - Key**

Short press to open or close the demister pad
When is volume mode decrease the volume
When in clock mode reduce an hour or reduce a minute

Note

When the Bluetooth is pressed and trying to connect the * key with flash
When the Bluetooth has made a connection it will remain lit
When a phone call is being received CALL will appear in the clock window